


TU5S INSTRUCTIONS FOR NAVIGATION

1. DISPLAY

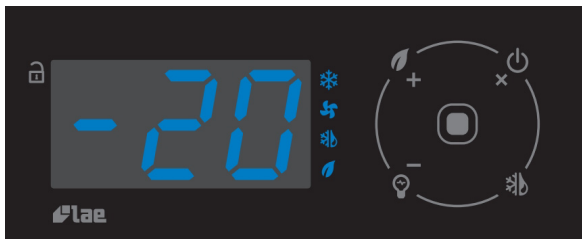

2. DISPLAY LEGEND

LED		BUTTONS	
	Thermostat output		Enter / Confirm
	Fan output		Decrement / Lights
	Defrost output		Increment / Eco mode
	Eco mode activated		Exit / Standby
	Keyboard unlocked (*)		Manual defrost

(*) Led off = locked, Led on = unlocked.
Led will blink to notify the key detection.

3. OPERATIONS

Unlock	Standby	Eco mode	Manual defrost	Manual lights
x2	2 sec	2 sec	2 sec	

4. MENU

NAVIGATION and VALUE DISPLAY	ITEM MODIFICATION
<ul style="list-style-type: none"> Menu item Display value or enter in submenu + Next item - Previous item x Exit 	<ul style="list-style-type: none"> Increase Decrease Save and go to following item x To exit without saving, press the key or wait 10 sec

MAIN MENU	INFO SUBMENU ITEMS
SP Display and modify main setpoint	T1 Temperature measured by probe T1
IISP ¹⁾ Display and modify alternative setpoint	T2 Temperature measured by probe T2
TIM Display and modify system minutes/hours (MIN, HRS)	T3 Temperature measured by probe T3
TAC ²⁾ Display and modify start and end time for function activation (Eco mode or light)	THI Maximum temperature measured
INF Info submenu	TLO Minimum temperature measured
	CND* Compressor working weeks
	PSD Enter Password for parameters submenu access
	* Only if ACC different from 0

5. PARAMETERS SUBMENU

To enter in parameters submenu, enter PSD = 12 on info submenu.

<parameters table: SPL, SPH, etc...>

MENU STRUCTURE

